COBALT

IBIC

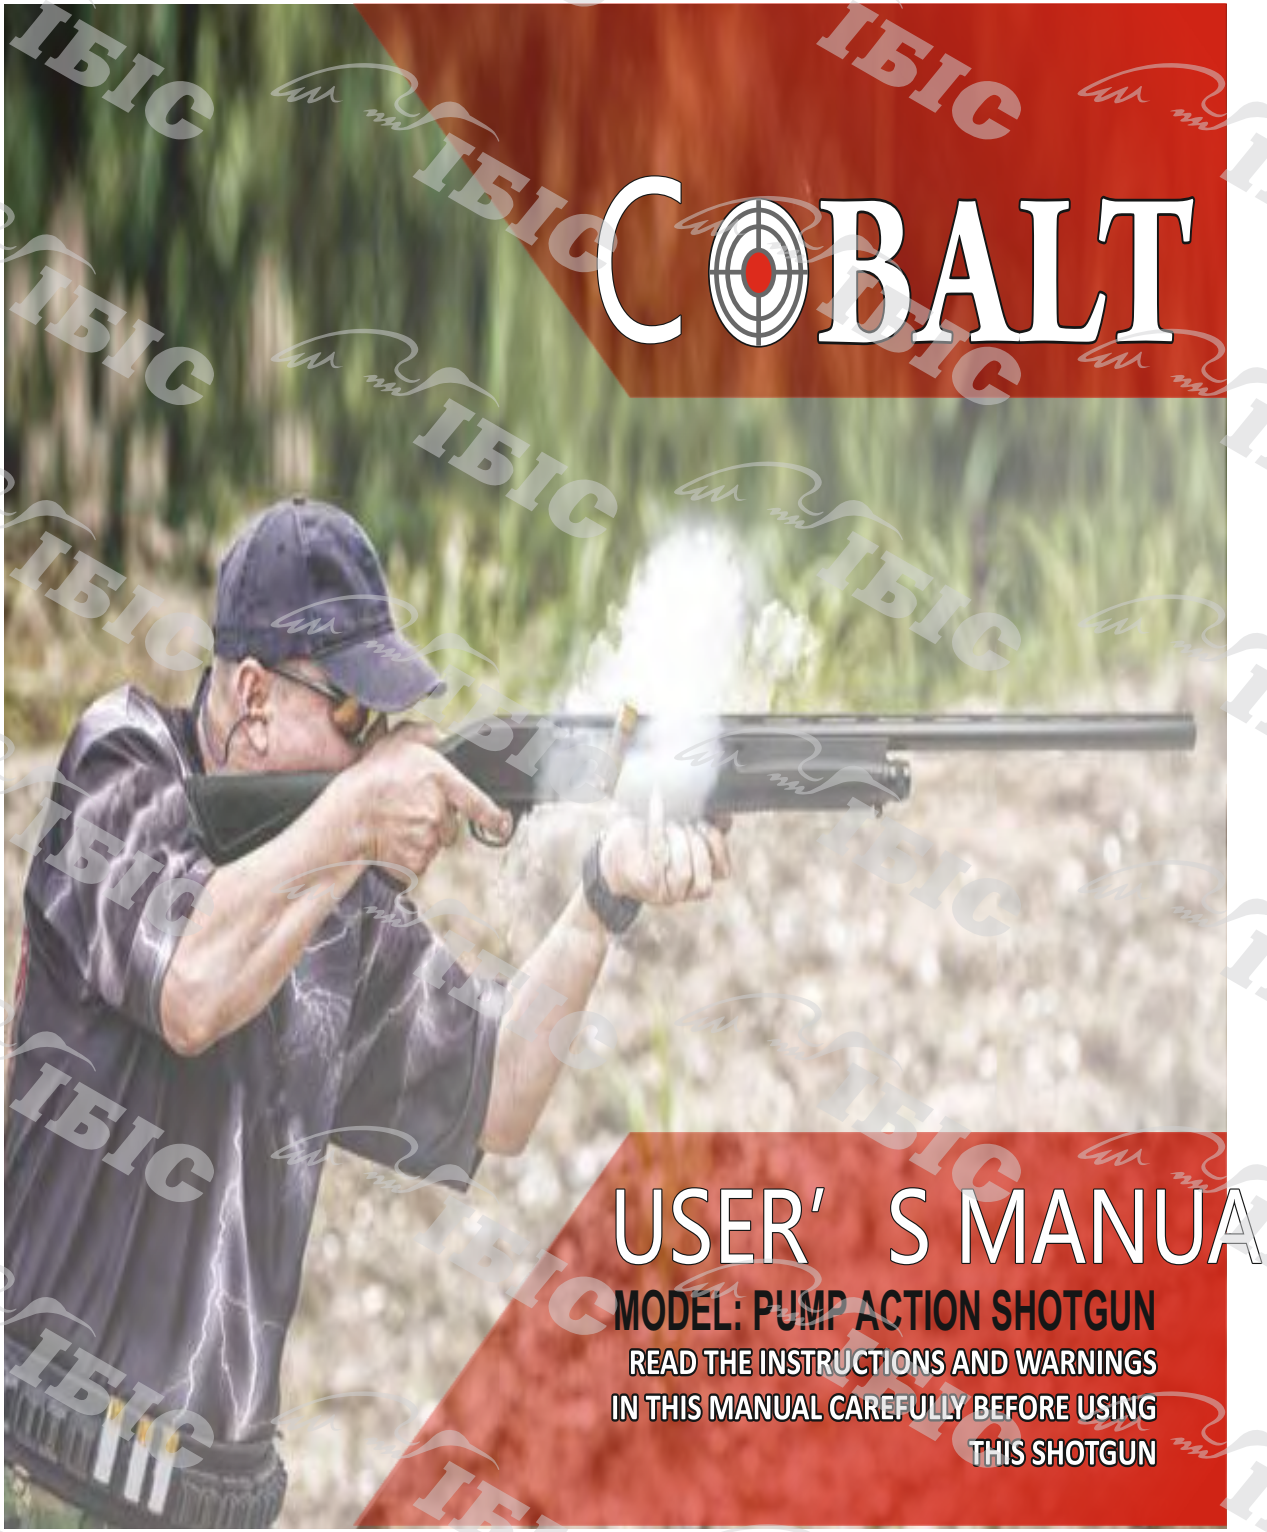

COBALT

USER' S MANUAL

MODEL: PUMP ACTION SHOTGUN

READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS SHOTGUN

Гладкоствольна помпова рушниця 1

Cobalt

Інструкція користувача

Зміст

Правила безпеки……………………………………………………
Про рушницю…………………………………………………………
Запобіжник…….. ……………………………………………………
Розборка………………………………………………………………
Заряджання рушниці…………………………………………………
Догляд і чистка………………………………………………………
Зберігання……………………………………………………………
Попередження про небезпечні речовини……………………

ІБІС

2го калібру

........................2
........................3
........................3
........................4
........................4
........................5
........................6
........................6

ПРАВИЛА БЕЗПЕКИ

Дотримуйтесь цих правил безпеки під час роботи зі зброєю.

Категорично забороняється:

1. При поводженні з вогнепальною зброєю безпідставно спрямовувати ствол зброї у бік людей, транспорту, будинків,інших будівель та споруд. За необхідності вогнепальна зброя має бути спрямована на поверхню, яка зможе прийняти кулю,наприклад, на землю, стовбур дерева, кулеуловлювач або вгору під кутом 45-60 градусів.
2. Залишати зброю без нагляду, де б це не було. а також передавати її іншим особам.
3. Користуватися без необхідності чужою зброєю та зброєю, навички поводження з якою відсутні.
4. Виймати вогнепальну зброю з кобури без потреби.
5. Тримати палець на спусковому гачку без необхідності.
6. Знімати запобіжник з положення “запобігання” у всіх випадках. не пов'язаних зі стрільбою.
7. Проводити чищення вогнепальної зброї у не відведених для цього місцях.
8. Закривати або затикати сторонніми предметами канал ствола, що при пострілі може призвести до його роздуття чи розриву.
9. Проводити чищення зброї бензином та іншими легкозаймистими речовинами, а також абразивними матеріалами, палити будь-що під час її чищення.
10. Стріляти по воді. Куля або шріт з великою швидкістю може рикошетом відскочити в непередбаченому напрямку.
11. Вживати алкогольні напої перед стрільбою та у процесі стрільби.

Поради користувачу:

1. Зберігайте зброю розрядженою, окремо від боєприпасів і в недоступному для дітей місці.
2. Перед зарядженням, переконайтеся, що ствол чистий від забруднень та сторонніх предметів.
3. Використовуйте боєприпаси належної якості .
4. Завжди надягайте захисні окуляри і захист для вух під час стрільби.
5. Не кладіть заряджену зброю у транспортний засіб.

Про руш

Ваша рушниця
за допомогою р
дробовими набо

Запобіж

Не покладай

Запобіжник пр

Запобіжник з
запобіжника,
спускової скоби

Коли ви будет
кнопка вискоч

ІБІС

ницю

є гладкоствольною вогнепальною зброєю з ручною перезарядкою ухомої цівки. Як і звичайна рушниця, помпова дозволяє вести вогонь як оями, так і кулями.

кник

теся тільки на запобіжник, завжди дотримуйтесь правил поводження зі зброєю.

изначений для перешкоджання можливості випадкового пострілу.

находиться на задній частині спускової скоби. Для активації натисніть на кнопку так, щоб вона з'явилася з правої сторони (рис.1). Знімати запобіжник дозволяється лиже перед початком стрільби.

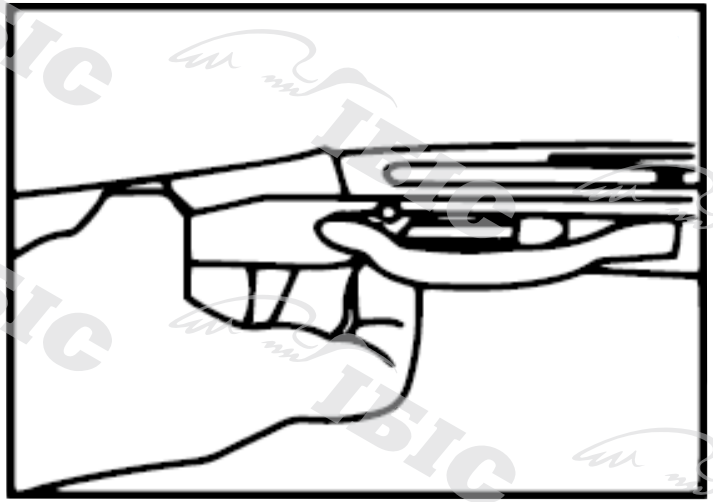

е готові стріляти, поставте запобіжник в положення «викл» так, щоб нила з лівого боку, в такому разі стане видно **ЧЕРВОНУ** позначку.

Розборка

1. Переконайтесь, що зброя розряджена!
2. Відкрутіть кришку магазина.
3. Обережно висуньте ствол з ресивера
4. Посуньте раму затвора вперед
5. Натисніть і утримуйте на засув направляючої інерційного механізму
6. Просуньте цівку разом з затвором вперед і зніміть з трубки магазина.

Зарядження рушниці (тільки 1 патрон

1. Увімкніть запобіжник
2. Направте рушницю в безпечному напрямку
3. Натисніть до верху на засув направляючої інерційного механізму
4. Повністю потягніть назад цівку та обережно тримайте його (для моделей зі зворотною пружиною під цівкою)
5. Вставте один патрон через вікно для викидання відстріляних гільз, переконавшись перед цим, що він має відповідний розмір і калібр. (Див. Рис.3)
6. Потягніть цівку вперед и закрийте затвор.

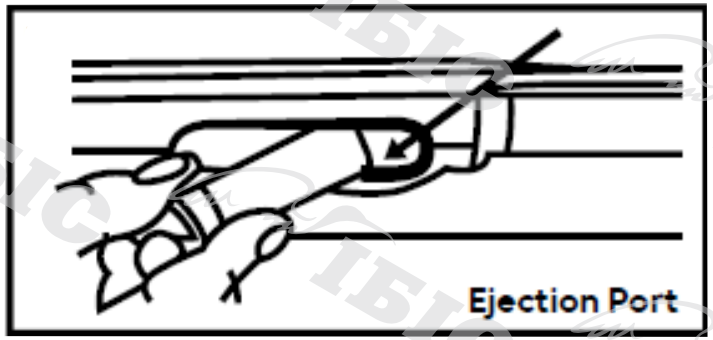

Заряджання магазину

1. Увімкніть запобіжник
2. Направте рушницю в безпечному напрямку
3. Вставте патрон верхньою стороною проти рами затвора. (Див. Рис.4)
4. Вставте патрони по одному в трубку магазину до заповнення. Ємність магазину: 8 набоїв (для гільзи 65 мм), 7 набоїв (для гільзи 70 мм) та 6 набоїв (для гільзи 76 мм).

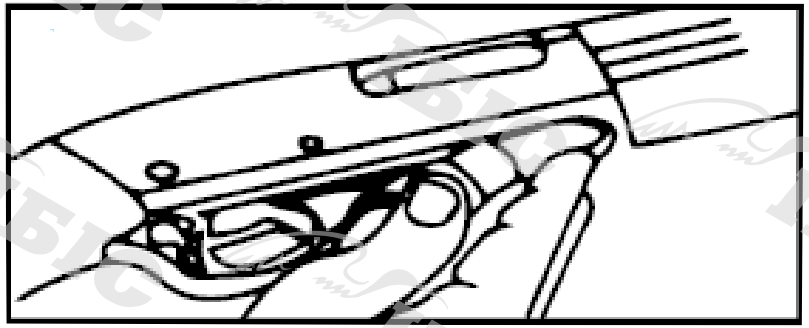

Для моделей зі зворотною пружиною під цівкою. Вам не потрібно витискувати цівку, щоб закрити ударний механізм. Це відбудеться автоматично за допомогою пружини. Будьте обережні з пальцями.

ВАЖЛИВО

Використання сталевого дробу.

Ви повинні бути в курсі наступних відмінностей і прочитати попередження: Ніколи не стріляйте сталевим дробом з чоком повного звуження, або з чоком середнього звуження. Це, може призвести до здуття або розриву ствола.

Догляд і чистка

Важливо: Перед розборкою на чисткою зброї, переконайтесь, що вона розряджена

1. Переконайтеся, що механізм затвора очищений, а ресивер змащений високоякісним збройовим маслом. Не використовуйте силікон і ланолін, а також засіб WD-40.

2. Змастіть за допомогою шомпола канал ствола, починаючи з казенної частини. Для запобігання відкладення частинок свинцю на стінках ствола, використовуйте очищуючий розчинник і латунну щітку для періодичної чистки каналу ствола. Якщо ваша рушниця оснащена чоковими насадками, не використовуйте латунну щітку для чищення ствола, без встановлених в ньому чокових насадок. Ніколи не стріляйте з рушниці, у якої не до кінця закручені чокові насадки. Перед зберіганням, протріть всі металеві поверхні промасленою тканиною. Не бризкайте і не заливайте масло всередину механізму, це може ускладнити належне функціонування. Для надійного функціонування зброї достатньо залишити на поверхні деталей тонку масляну плівку.

Зберігання

Ретельно очистіть і змастіть вашу рушницю, перш ніж відправляти її на зберігання. Зберігайте рушницю в сухому сейфі при кімнатній температурі. Зберігайте зброю п від дітей і від сторонніх людей. Завжди зберігайте зброю незарядженою.

Попередження про небезпечні речовини

Розрядження, чистка зброї в погано провітрюваних приміщеннях може призвести до того, що речовини, які виділяються в подальшому можуть стати причиною серйозних пошкодж
Завжди добре провітрюйте приміщення. Мийте руки після операцій зі зброєю.

юдалі

кень.

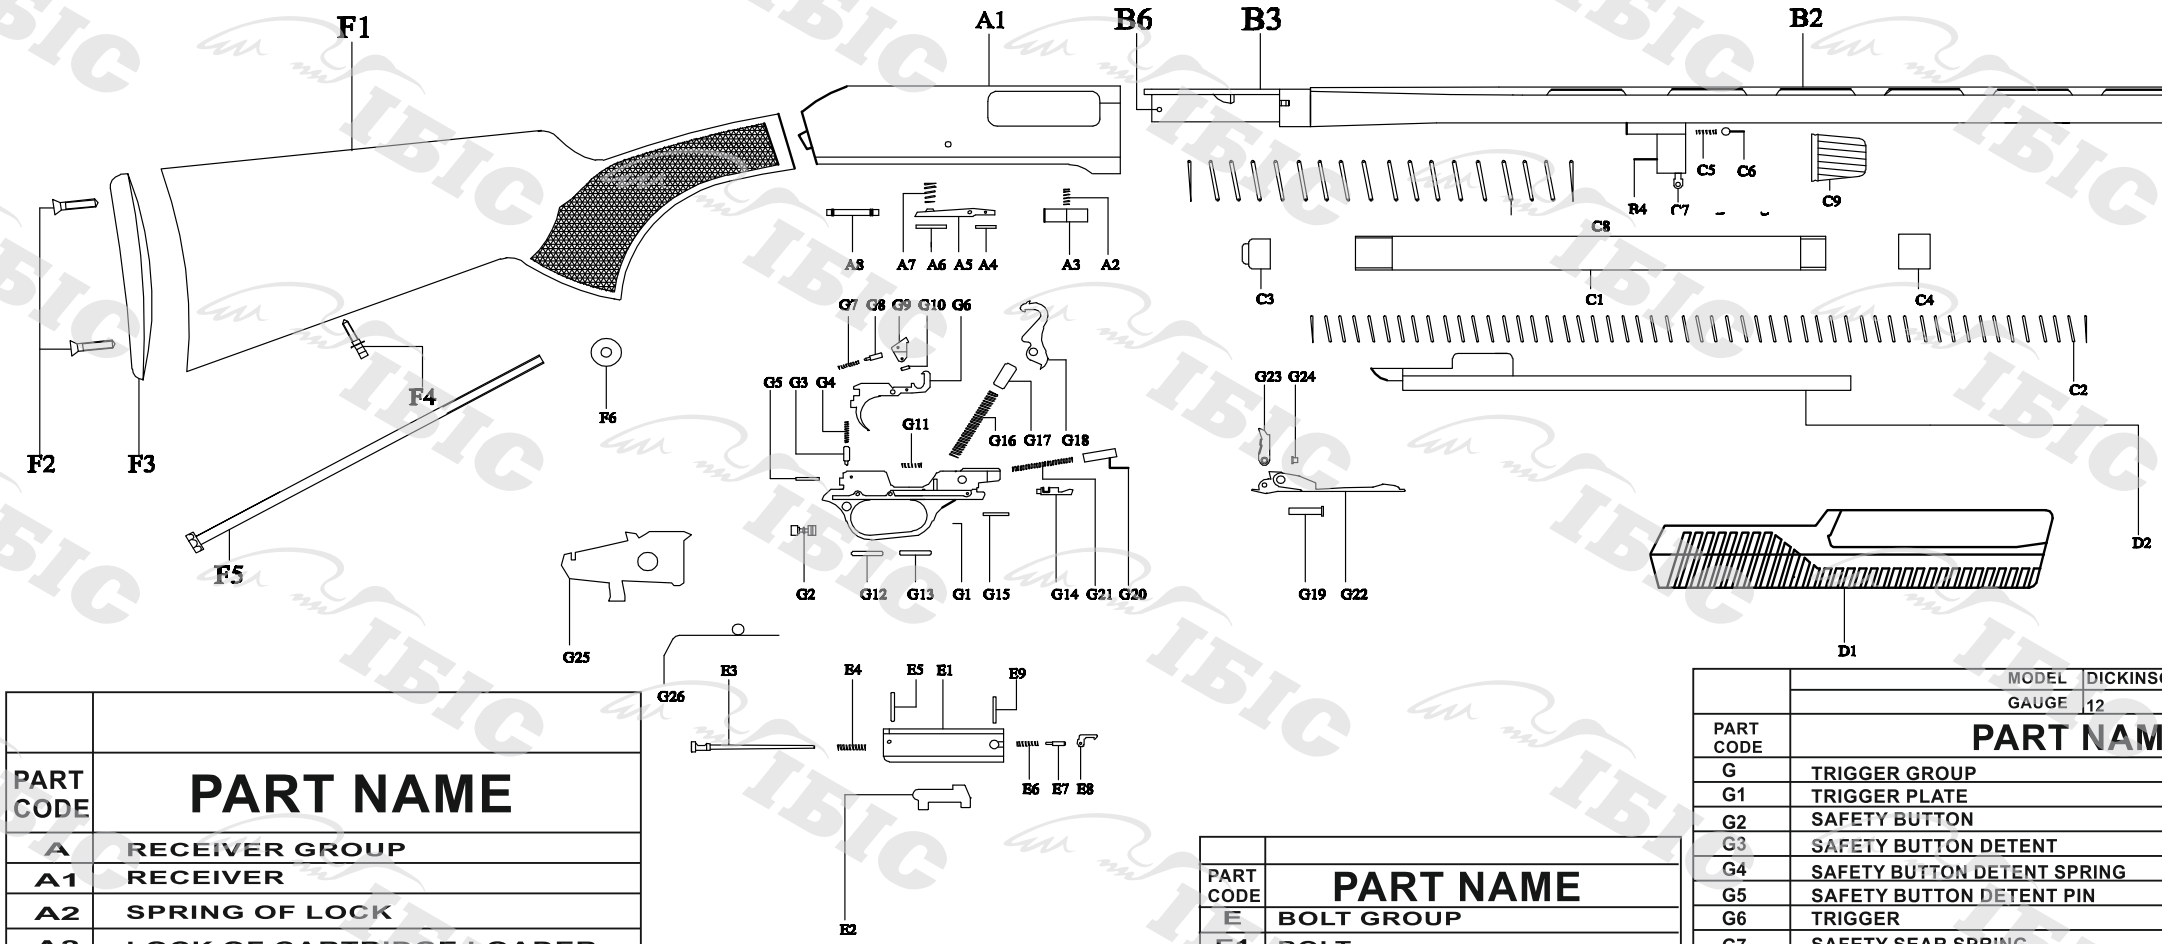

PART CODE	PART NAME
A	RECEIVER GROUP
A1	RECEIVER
A2	SPRING OF LOCK
A3	LOCK OF CARTRIDGE LOADER
A4	PLATE OF CARTRIDGE LOADER
A5	LATCH
A6	LATCH PIN
A7	LATCH SPRING
A8	TRIGGER PLATE RETAINING PIN
B	BARREL GROUP
B1	BARREL
B2	TOP RIB
B3	BARREL HOOD
B4	BARREL COLLAR
B5	SIGHT BEAD
B6	EJEKTOR PIN

PART CODE	PART NAME
C	MAGAZINE GROUP
C1	MAGAZINE TUBE
C2	MAGAZINE SPRING
C3	MAGAZINE PLUG FRONT
C4	MAGAZINE PLUG REAR
C5	DETENT BALL SPRING
C6	DETENT BALL
C7	SWIEL HOLDER
C8	ACTION RETURN SPRING
C9	MAGAZINE CAP
D	FOREND GROUP
D1	FOREND
D2	ACTION ARM

PART CODE	PART NAME
E	BOLT GROUP
E1	BOLT
E2	LOCKING BOLT
E3	FIRING PIN
E4	FIRING PIN SPRING
E5	FIRING PIN REATAINING PIN
E6	EXTRACTOR SPRING
E7	EXTRACTOR PLUNGER
E8	EXTRACTOR
E9	EXTRACTOR PIN
F	STOCK GROUP
F1	STOCK
F2	HEEL PAD SCREWS
F3	HEEL PAD
F4	STOCK SWIVEL
F5	STOCK BOLT
F6	STOCK BOLT WASHER

	MODEL	DICKINS
	GAUGE	12
PART CODE	**PART NAM**	
G	TRIGGER GROUP	
G1	TRIGGER PLATE	
G2	SAFETY BUTTON	
G3	SAFETY BUTTON DETENT	
G4	SAFETY BUTTON DETENT SPRING	
G5	SAFETY BUTTON DETENT PIN	
G6	TRIGGER	
G7	SAFETY SEAR SPRING	
G8	SAFETY SEAR SPRING PLUNGER	
G9	SAFETY SEAR	
G10	SAFETY SEAR PIN	
G11	TRIGGER SPRING	
G12	PIN OF TRIGER HOLDER	
G13	TRIGGER PIN	
G14	PIN OF CARTRIDGE CARRIER	
G15	LOCK PIN OF CARTRIDGE CARRIER	
G16	HAMMER SPRING	
G17	HAMMER PLUNGER	
G18	HAMMER	
G19	CARRIER AXIS	
G20	CARRIER DOG PLUNGER	
G21	CARRIER DOG PLUNGER SPRING	
G22	CARTRIDGE CARRIER	
G23	CARRIER DOG	
G24	PIN OF CARRIER DOG	
G25	LOCK OF MECHANISM	
G26	SPRING OF LOCK OF MECHANISM	

IBIC



ON Pump action

E

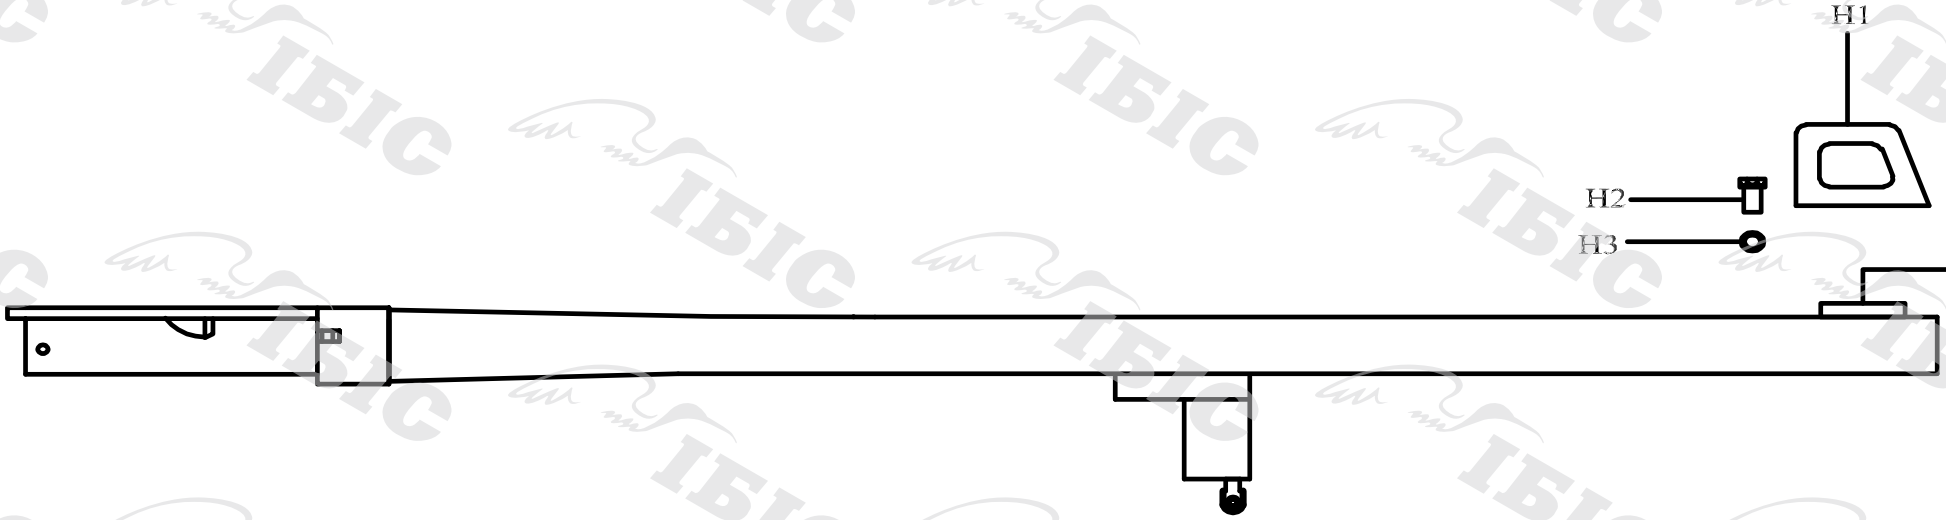

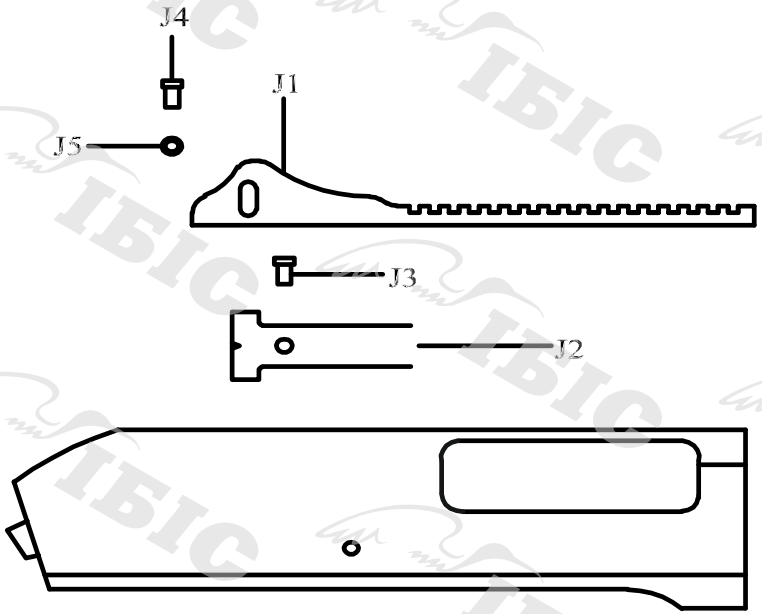

	MODEL	DICK
	GAUGE	12
PART CODE	**OPTIONAL SPARE PART**	
H1	High Bead Front Sight	
H2	Bead Screw	
H3	Bead Screw Washer	
H4	Bead Retaining	
I1	High Bead Front Sight	
J1	High Bead Front Sight	
J2	High Bead Front Sight	
J3	High Bead Front Sight	
J4	High Bead Front Sight	
J5	High Bead Front Sight	



INSON Pump action
S NAME

SAFETY RULES

Observe these rules of safe gun handling.

1. Always keep the muzzle pointed in a safe direction.Watch the muzzle at all times: never point a gun, accidentally or intentionaly, at any person or anything you do not intend to shoot. Identıfy the target before shooting; do not shoot at sounds.

2. Always treat a gun as if it is loaded - it may be !

3. Keep your finger off the trigger while operating the action and at all other times until you are ready to shoot.

4. Keep the safety ‘’on’’ or in the ‘’safe’’ position at all times until you are ready to fire. Do not rely on your gun’s safety, the safety on any gun is a mechanical device and is not intended as a substitute for common sense or safe gun handling.

5. Learn how your gun functions and handles, If you do not thoroughly understand the proper use and care of your gun, seek the advice of someone who is knowledgeable.

6. Do not alter or modify any part of the firearm.

7. Store guns unloaded, separate from any ammunition, and out of the reach of children.

8. Be sure the barrel is clear of any obstructions before loading. Make it a habit to check the barrel every time before loading.

9. Be sure you have and use the proper ammunition. A 20 gauge shell will enter a 12 gauge chamber far enough so that a 12 gauge shell can be loaded behind it. Also, a 3 inch shell may fit into a 2 inch chamber, but the crimp at the mouth of the shell will unfold into the forcing cone. If either of these things occur and you injury or death to you and those around you.

10. Wear protective shooting glasses and adequate ear protection when shooting.

11. Never climb or jump over anything, such as a tree, fence, or ditch, with a loaded gun. Open the barrel , remove the shells and hand the gun to someone else or place it on the ground on the other side of the obstacle before crossing it yourself. Do not lean a gun against a tree or other object; it could fail and possibly discharge.

12. Do not shoot at a hard surface or at water. Bullet and shot can ricochet or bounce off and travel in unpredictable directions with great velocity.

13. Never transport a loaded gun. DO not place a loaded gun into a vehicle. The gun should be unloaded an placed into a case when not in use.

14. Never drink alcoholic beverages before or during shooting.

ABOUT YOUR PUMP

Your shotgun is manually operated.
the locking lug in the bolt moves do
forearm can then be moved to the r
and loading a new shell.

To open the bolt without firing the g
located just beside and forward of t
opening the action without dry firing

The magazine tube will only accept
shells

Please check if your shotgun mode

SAFETY CATCH

The safety is designed to stop the trigger me
DON’T RELY ON YOUR GUN’S SAFETY.TR
LOADED AND READY TO FIRE. The safety
and it is not intended as a substitute for com
keep the muzzle pointed in a safe direction.

A- The safety is located behind the trigger, a
or unintentional discharge under normal usa

B- To engage the safty, push the button so t
the gun and the RED BAND MARKING CAN
always be in the ‘’on’’ or ‘’safe’’ position until

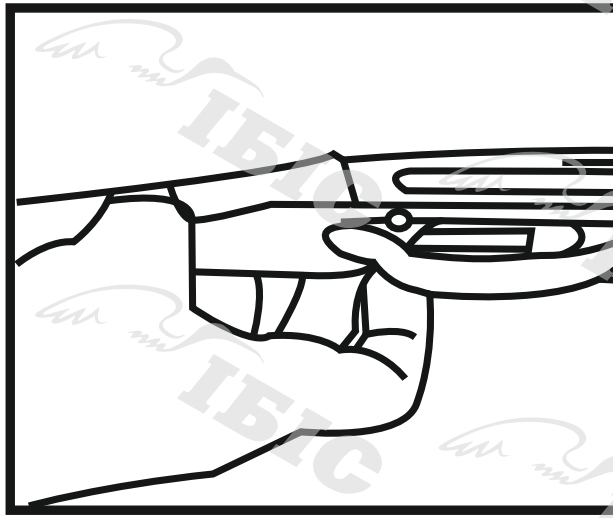

SHOTGUN

Once a shell has been fired,
wmn, unlocking the gun. The
ear and forward again, ejecting

un, depress the action bar lock,
ne trigger. This allows for
.

5pcs. 2 3/4. shells or 4pcs.3''

l includes mobile chokes.

echanism.
REAT EVERY GUN AS I F IT WERE
on any gun is a mechanical device,
mon sense or safe gun handling. Always

nd provides protection against accidental
ge when properly used.

hat it protrudes from the right side of
NOT BE SEEN. The safety should
intend to fire the gun. (Photo 1)

C - When you are ready to fire the gun, press the safty button to the ''off'' position so that the safety protrudes from the left side of the gun ande the RED BAND MARKING IS SHOWING.

DANGER: The gun will fire when the trigger is pulled intentionally or accidentally when the RED BAND MARKING IS SHOWING.

ASSEMBLY

1. Remove the magazine cap.
2. Press upward on the action bar lock. Pull the forearm approximately half way rearward.
3. Hold the barrel ahead of the barrel guide ring (See picture 2).

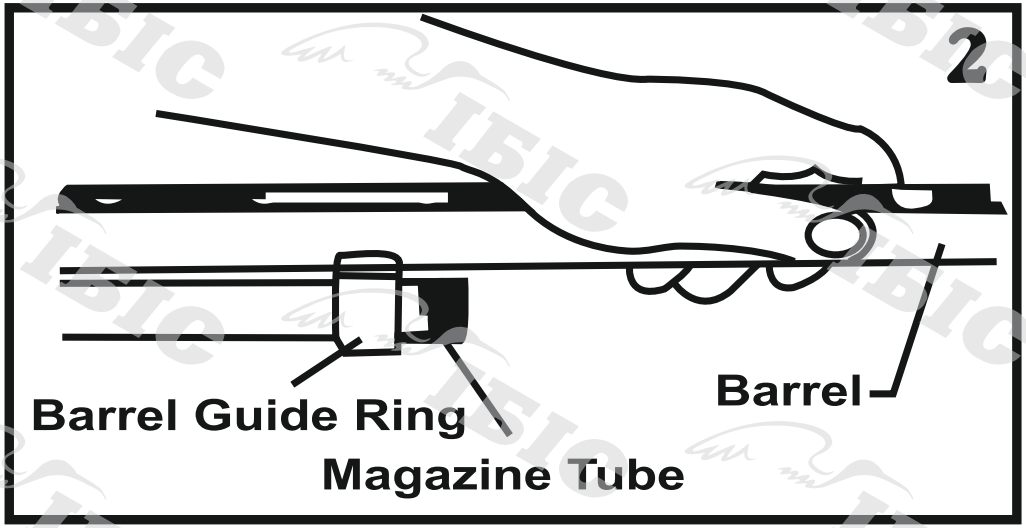

4. Slide the barrel guide ring over the magazine tube. Clean the barrel following the instructions on Page 8.
5. Press upward on the action bar lock.
6. Align the ejector on the receiver. DO NOT FORCE IT !
7. Carefully set the barrel into the receiver. DO NOT FORCE IT!
8. Replace the magazine cap. Tighten.

DISASSEMBLY

1. Make sure the gun is unloaded!
2. Point firearm in a safe direction
3. Push up on the action bar lock.
4. Slide forearm forward half way.
5. Unscrew and remove the magazine cap.
6. Pull the barrel carefully out of the receiver.
7. Push the carrier forward.
8. Press and hold the action bar lock.
9. Slide the forearm forward and off the magazine tube.

IBIC

IBIC

LOADING YOUR SHOTGUN
- ONE SHELL ONLY -

1. Put safety in the ''on'' position.
2. Point the gun in a safe direction.
3. Push up on the action bar lock.
4. Pull the forearm completely to the rear and caredully hold it for the return spring models
5. Put one shell through the ejection port, making sure it is the correct gauge and length. (See picture 3)
6. Push the forearm forward and close the action.

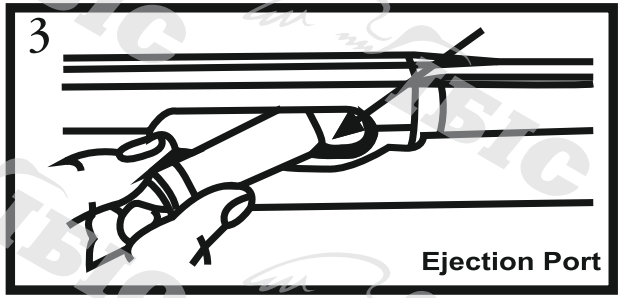

FULLY LOADING YOUR SHOTGUN

1. Put safety in the ''on'' position.
2. Point the gun in a safe direction.
3. Push up on the action bar lock.
4. Pull the forearm completely to the rear and carefully hold it for the return spring models
5. Put one shell through the ejection port, making sure it is the correct gauge and length. (See picture 3)
6. Push the forearm fonvard and close the action.
7. Push a shell upward against the bottom of the carrier. (See picture 4)
8. Push two (2) to four (4) shells, one at a time, fully forward into the magazine tube.

FOR THE MODELS WITH RETURN SPRING IN THE FOREND. YOU DO NOT NEED TO PUSH THE FOREARM TO CLOSE THE ACTION. THIS WILL BE DONE A UTOMATICALLY. BY THE HELP OF THE SPRING. THE SPRING WILL CLOSE THE ACTION AT A VERY FAST RATE. USE CAUTION ANDE WATCH OUT FOR YOUR FINGERS AND LOOSE CLOTHING.

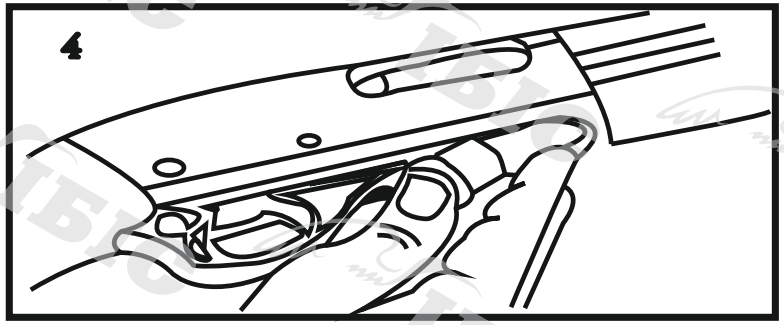

USAGE OF CHOKE TUBES
(IF YOUR SHOTGUN INCLUDES)

	SKEET	IC	M	IM	
CHOKE TUBE					
BBLS	CL	★★★★	★★★	★★	

The choke controls how open or tight the pattern of the shot will chart below lists the chokes available (from open to tight), and th spending marks that indicate the specific choke.
Never fire your gun or run cleaning tools through a barrel that us choke tube without having a choke installed. The threads of the tube and the internal threads of the barrel should be cleaned aft use and before installation of the tube. Your shotgun uses Beret / Benelli ® style choke tubes. To install a tube, insert the tube int top of the barrel and tighten with your fingers. Once the tube is f tightened, tighten the rest of the way with the appropriate choke wrench until the tube is snug. DO NOT over tighten or forcefully witch the wrench.

IMPORTANT
USAGE OF STEEL SHOT

The choke (before constriction) in all modern shotguns has beer established based on the pattern performence of shot shells loa with lead shot. When using steel shot shells, you will notice a dif performance in pattern density versus the established lead shot because the steel shot is harder and lighter than lead shot.

You should be aware of the following differences and cautions: Never shoot steel shot loads in a full choked barrel or an improved modified choked barrel. Doing so, may cause the barrel to swell or

In general , steel shot fired with a modified choke will produce the equivalent of a lead full choke pattern. This will be true of all steel sized up to and including no. 2. The established improved cylinder chokes will produce the equivalent of a (lead) modified pattern. All shot sized larger than no.2, and including special sized such as F, should be used only with improved cylinder choke, will produce eq to (lead) full choke patterns. The established cylinder choke or bo produce the equivalent of a modified (lead) pattern. Additional info Concerning the use of steel shot is available from the ammunition companies.

be. The
he core

ses a
choke
er each
ta®
to the
inger
tube
tighten

n
ded
fferent
pattern,

rupture.

shot
r
steel
T,etc.,
quivalent
re will
rmation

MAINTENANCE AND CLEANING

Caution: Make sure the gun in UNLOADED.

1. Make sure the broad, polished finely fitted mating surface of the breech block and receiver is especially clean and lightly oiled with high quality gun oil. Do not use silicone or lanolin (Do not use WD-40).

2. Run an oil patch through the bore with a cleaning rod starting from the breech end. To prevent leading, use a cleaning solvent and brass brush to clean the bore periodically. Follow this cleaning with one or two clean oil patches. Important: If your gun is equipped with choke tubes, do not use a brass brush to clean the barrels without having a choke tube installed. Barrels that utilize choke tubes must also have the choke tubes themselves. This will protect the threads and prevent dirt build up that can cause tubes to become difficult to remove.

Never fire your gun without choke tubes snuggly tightened in barrels. Do not over tighten choke tubes. Wipe all exposed metal surfaces with an oiled cloth before stroring. Do not squirt or pour oil into the inside mechanism because it may hamper proper functioning. After extended periods of heavy use, your gun should be taken to a qualified gunsmith to have the action disassembled for professional cleaning and lubrication.

3. Care for your wood stock and forearm the same way you would a piece of furniture with the same finish.

STORAGE

Clean thoroughly and oil your gun before storage. Store the gun in a case to prevent scratches and dents. Store your firearm in a dry place to prevent corrosion. Store the gun away from children and in a place where it cannot be obtained by those unauthorized to use it. Always store gun unloaded and separately from any ammunition.

HAZARDOUS MATERIAL WARNING

Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition, may result in exposure to lead and other substances known to cause birth defects, reproductive harm, and other serious injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.

ІБІС